

WINCHESTER®



TRAP PARTS



Table of Contents

MODEL V1577A & B, V1582A & V1583A	Page 2
MODEL V1582A & V1583A	Page 14
MODEL V1524A, B & C.....	Page 20
MODEL V1579C, V1581C	Page 30
V400, X400 RELEASE CORD ASSEMBLY	Page 32
MODEL V1574A & B	Page 34
ASSEMBLIES FOR V1577A, B, & V1582A, V1583A	Page 46
ASSEMBLIES FOR V1524A, B, C	Page 72
ASSEMBLIES FOR V1579A, B, C, V1581C	Page 92
ASSEMBLIES FOR V1574A, & B.....	Page 94



 
750 Arroyo Ave.
San Fernando, Ca 91340
(818) 365-3946
Outside of California
1-800-548-5444
FAX. (818) 365-8725
www.goldenwestindustries.com

V1577A & B, V1582A & V1583A Western Autoloading Trap Parts


U1W




U2AW

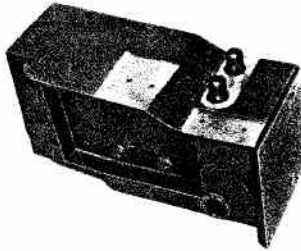


V3AW

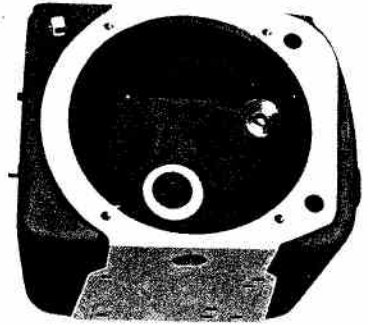 


U4W

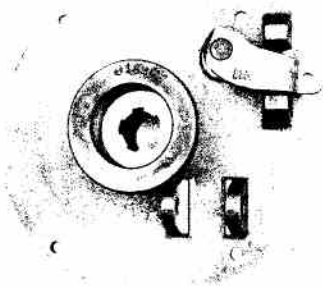 

V6

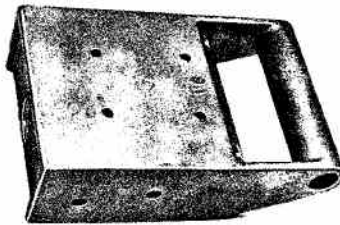 

V7A

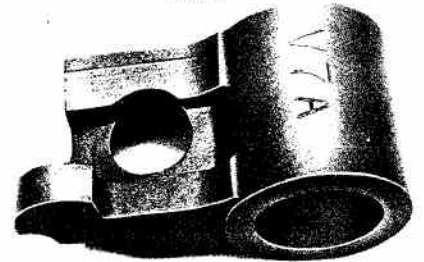 


V8




V9AW



 
V10W

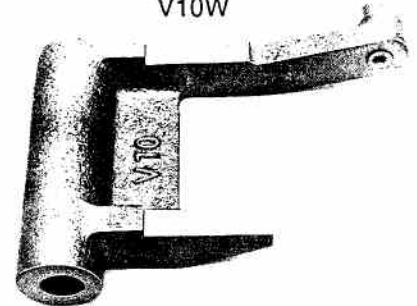


U29W

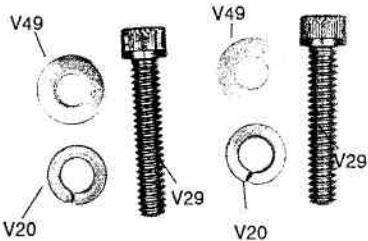 


X36W

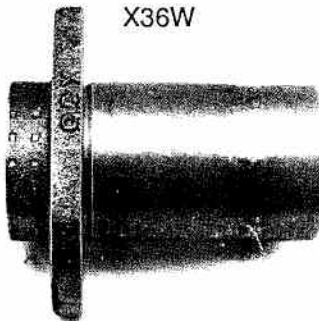 

X39AW

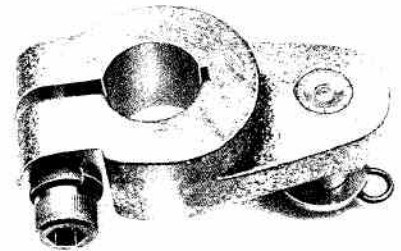 

XU40W

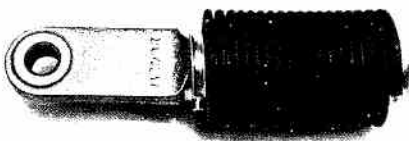 

V1577A & B, V1582A & V1583A Western Autoloading Trap Parts


CAT.NO.	NAME
U1W	Magazine Support Bracket Assembly
U102	Bushing for U1W (not shown)
U2AW	Frame Assembly
V3AW	Gear Housing Assembly
U4W	Gear Housing Cover and Feed Cam Assembly
* U5A	Mainspring Housing (not shown)
* V6	Solenoid Housing
V7A	Cocking Pawl
V8	Hold-Back Pawl
V9AW	Control Cam Assembly
V10W	Sear Assembly
V11W	Trigger Arm Assembly (not shown)
* U13W	Swivel Base Assembly (not shown)
* U14	Outer Bearing Race (not shown)
* U15	Support Bearing Race (not shown)
* U16	Adjustable Bearing (not shown)
* U17	Bearing Race Shim (not shown)
* U18W	Ball Bearings (set of 37) (not shown)
* U19W	Screws for Swivel Base Outer Bearing Race, Magazine Guide Rails (set of 12) (not shown)
* U20W	Adj Bearing Race (set of 12 screws with lock washers and nuts) (not shown)
* U21W	Windage Adjusting Base Assembly (not shown)
* U22W	Windage Adjusting Base Pivot Assby (not shown)
* U23	Windage Latch Plunger (not shown)
* U24	Windage Latch Release (not shown)
* U25	Spring for Windage Latch and Target Stop Plungers (not shown)
* U27	Carrier Arm (not shown)
U27A	Carrier Arm (Intl) (not shown)
U27AW	Carrier Arm Assembly (Intl) (not shown)
* U28	Carrier Plate (not shown)
U29W	Carrier Plate Screws (set)
* U30W	Carrier Rail Bolts (set) (not shown)
* U32AW	Carrier Rail Assembly (not shown)
V34	Carrier Rail Support (not shown)
X36W	Worm Shaft Gland Assembly
V36AW	Trap Grounding Bolt (not shown)
X37	Washer for Crank Stud (not shown)
X39AW	Mainspring Crank Assembly
XU40W	Mainspring Assembly

V1577A & B, V1582A & V1583A Western Autoloading Trap Parts


X42



 X43

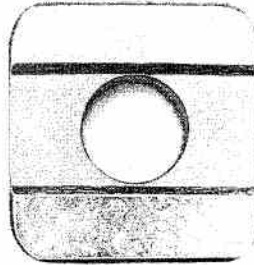

X212B

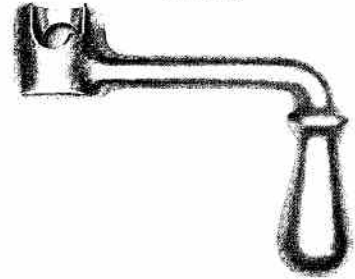 


U45



U46



 
V47W

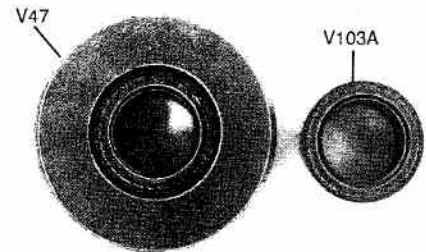


U49



 
U50

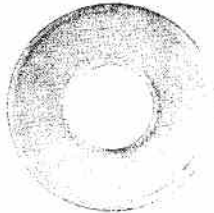

V51A

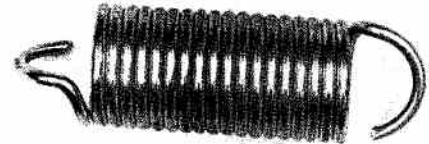 

U363

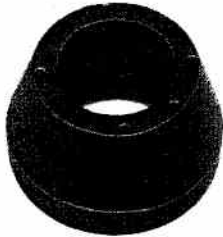 

U53



U56



V59W



V57A



V60A



X58



V62



V1577A & B, V1582A & V1583A Western Autoloading Trap Parts

 
X65



V66



V67

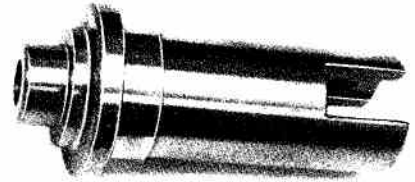

V68



 
V70




V71





V72A

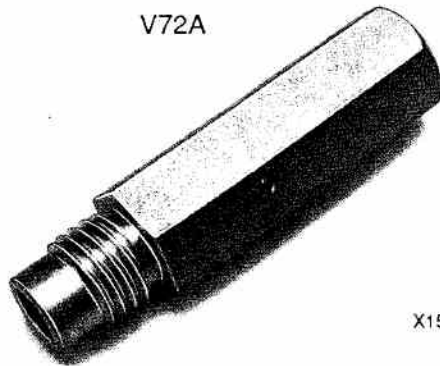



X76W

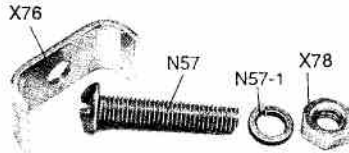 


X79W

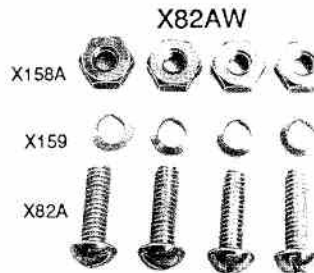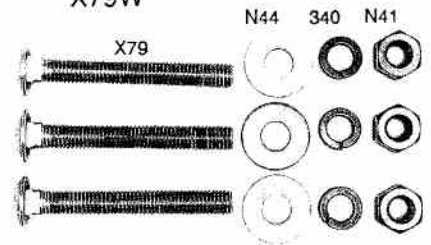  


V82W

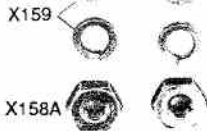  

X88W

 

U85W

 


X87W



V107A



 V108AW

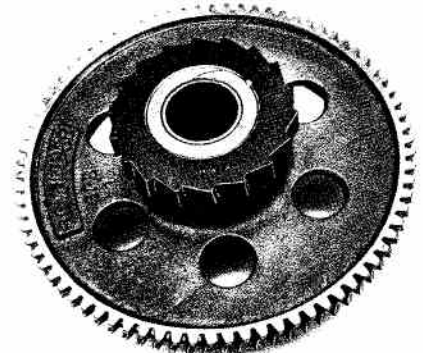

V1577A & B, V1582A & V1583A Western Autoloading Trap Parts

(See illustration on page 4 & 5)

CAT.NO.	NAME
X42	Mainspring Adjusting Screw
X43	Mainspring Swivel
X212B	Mainspring Adjusting Speed Crank
U45	Mainshaft
U46	Nut for Mainshaft Windage Base Pivot and Spider Mounting Stud
V47W	Escapement Cam Roll Assembly
U49	Carrier Hold Down Spring
U50	Carrier Hold Down Washer
V51A	Escapement Lever Spring
U363	Escapement Cushion
U53	Escapement Cushion Holder
U56	Trigger Pull Rod
V57A	Trigger
X58	Spring for Trigger Arm and Push Rod Operator
V59W	Trigger Mounting Bolt Assembly
V60A	Trigger Bushing
V62	Shaft for Sear and Hold-back Pawl
V63W	Pawl Holding Magnet Assembly (not shown)
X65	Cocking Pawl Spring
V66	Firing Pin
V67	Firing Pin Guide
V68	Firing Bar
V70	Sear Plunger
V71	Sear Spring
V72A	Sear Plunger Bushing
* X76W	Cable Anchor Clip Assembly
* X79W	Base Bolts (set of 3)
V82W	Stop Finger Bracket and Guide Shelf Bracket Bolts (set of 2 bolts with extra lockwashers)
X82AW	Solenoid Mounting Bolts (set of 4 bolts with lockwashers)
U85W	Roll Pins for U225 (set)
X87W	Screws for Gear Housing Cover or Cocking Worm Gland (also to pull V62 shafts from V3 housing)
X88W	Clamp Screw Assembly for Mainspring Crank
V93W	Gear Housing Mounting Screws (set of 4) (not shown)
X94	Key for Mainspring Crank (not shown)
V105W	Mainshaft Oil Seal and Lower Bearing Assembly (not shown)
X106A	Worm Shaft Oil Seal (not shown)
** V107A	Cocking Worm
** V108AW	Worm Gear Assembly

* NOT FOR USE ON V1582A AND V1583A TRAPS.

 
** V1582A & V1583A TRAPS BEGINNING WITH SERIAL NO. U & US2748
USE V107A & V108AW.

V1577A & B, V1582A & V1583A Western Autoloading Trap Parts



V1577A & B, V1582A & V1583A Western Autoloading Trap Parts

U142W

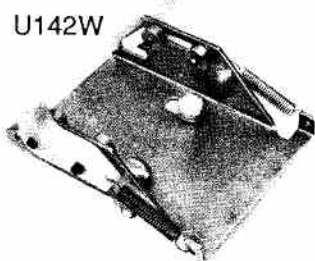


U145W



U150AW



 
U151W

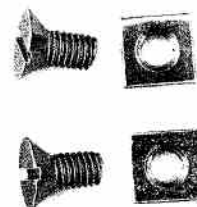

U156W



 U155

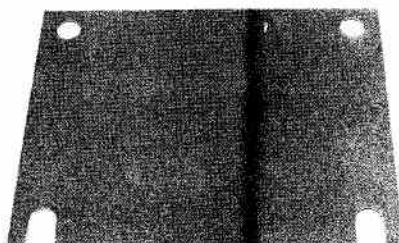


V163W




U177W



 U174BW

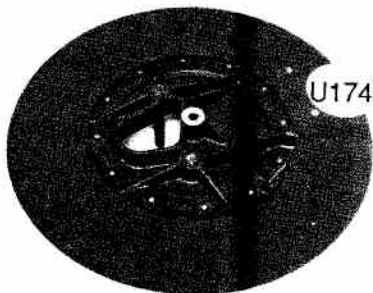

U178









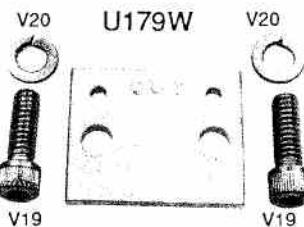 


V1577A & B, V1582A & V1583A Western Autoloading Trap Parts

(See illustration on pages 7 & 8)

CAT.NO.	NAME
V110W	Planet Gear Assembly
* V111A	Cocking Ring Gear and Ratchet
* X117A	Power Cord Assembly
* U119	Power Receptacle (not shown)
* U120	Release Outlet Receptacle (not shown)
X400	Release Switch Assembly (100 ft cable)
U122BW	Motor Cable
* X125AX	Release Switch Only (for X125A release) (not shown)
* Z6A	Release Switch Only (for X125B,C & D release) (not shown)
* V126W	Outlet Box Assembly
X127	Release Solenoid (115V)
* V128	Cable Connector
XU129A	Cocking Motor (115/230 V. 60/50 HZ)
X130B	Cocking Motor Coupling
X131	Capacitor for Cocking Motor
* U130A	Angle Changing Motor Coupling (not shown)
* U131AW	Angle Changing Motor Assembly (115/230 V 60/50 HZ) (not shown)
X132	Worm Thrust Bearing
X133	Oil Filler and Level Gauge Plugs (not shown)
U134W	Assorted Cotter Pins (not shown)
* U135W	Elevation Pivot Assembly (not shown)
* U136	Elevation Screw Swivel (not shown)
* U137AW	Elevation Adjusting Screw Assembly (not shown)
V141	Tool for Guiding Main Shaft thru Oil Seal (not shown)
U142	Target Stop Finger Bracket (not shown)
U142W	Target Stop Finger Bracket Assembly
U143A	Target Stop Finger (not shown)
U144	Stop Finger Retaining Collar (not shown)
U145W	Stop Finger Guide Pin (also used for items U24, U149B and U178, set of 4)
U146	Stop Finger Spring (not shown)
U149B	Target Feed Finger (not shown)
U150	Target Feed Finger Bracket (not shown)
U150AW	Target Feed Finger Bracket Assembly
U151W	Target Feed Finger Bolts (set of 2)
U155	Magazine Support Bracket Shim
U156W	Magazine Support Bracket Mounting Screw (set of 4)
N160	Magazine Friction Spring (not shown)
V161W	Solenoid & Indexing Gear Housing Screws (not shown)
N163	Magazine Friction Spring Washer (not shown)
V163W	Trap Motor Mounting Bolts (set of 4)
U165AW	Angle Changing Motor Mounting Screws (set of 4) (not shown)
V173W	Trap Motor Support Screw (set of 2) (not shown)
U174BW	Magazine Base Assembly
U177W	Escapement Push Rod Assembly
U178	Escapement Push Rod Spring
U179W	Push Rod Spring Holder Assembly

         V1577A & B, V1582A & V1583A Western Autoloading Trap Parts

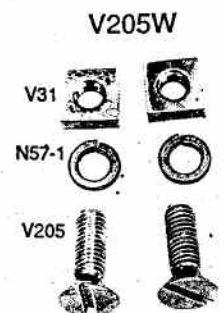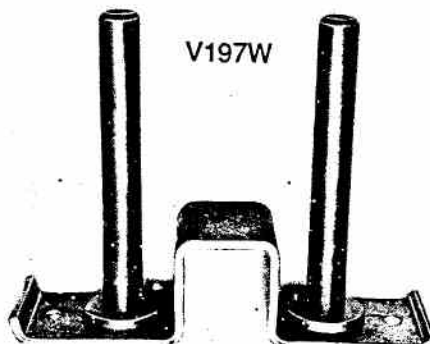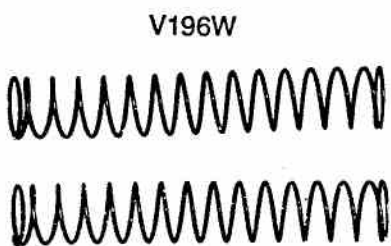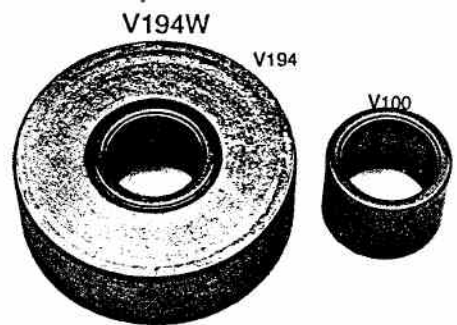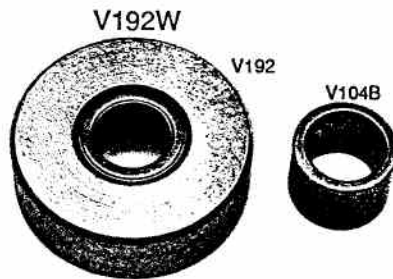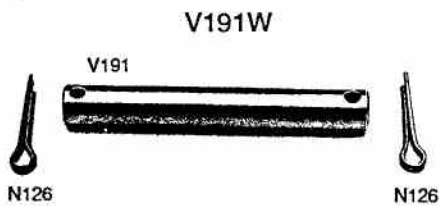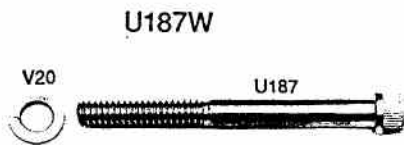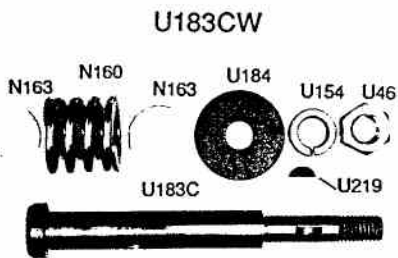

V1577A & B, V1582A & V1583A Western Autoloading Trap Parts

 
V206



U207W




U208W

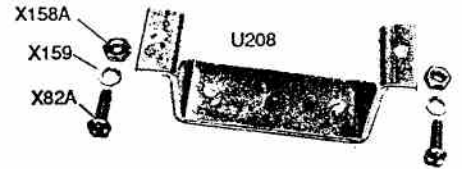

U209



 U210W




U211W



U214AW



 U212

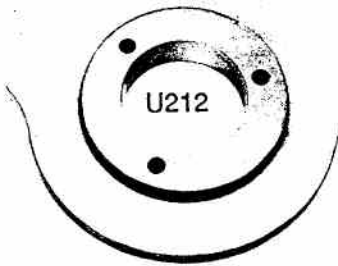

U213



 
U218



U219




U216W



U220W U221



 U222

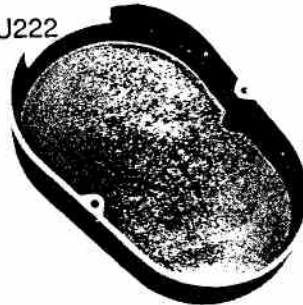


U223



U224AW



 U225TR

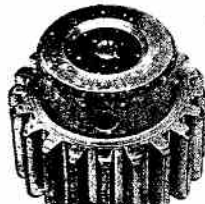

V1577A & B, V1582A & V1583A Western Autoloading Trap Parts

(See illustration on pages 10 & 11)

CAT.NO.	NAME
U180AW	Magazine Spider Assembly
U101	Bushing for U180AW (not shown)
U181	Magazine Inner Guide Rail
U182A	Magazine Outer Guide Rail
U183CW	Magazine Mounting Stud Assembly
U184	Magazine Thrust Bearing
U185W	Escapement Lever Assembly
U92	Bushing for U185W (not shown)
U186	Escapement Lever Stud
U187W	Cap Screws
U189AW	Target Feed Cam
U190W	Target Feed Arm Assembly
V191W	Target Feed Arm Pivot Assembly
V192W	Target Feed Cam & Indexing Gear Drive Roll Assembly
V194W	Feed Shelf Operating Roll Assembly
V196W	Feed Shelf Lifting Spring (set of 2)
V197W	Feed Shelf Operating Bracket Assembly
* U201W	Target Stop Plunger Assembly (not shown)
U204W	Target Feed Shelf Assembly (not shown)
U204AW	Target Feed Shelf Assembly (not shown)
V205W	Target Feed & Guide Shelf Bolts (set of 2)
V206	Feed Shelf Shim
U207W	Target Guide Shelf Assembly
U208W	Guide Shelf Bracket Assembly
U209	Escapement Push Rod Operator
U210W	Escapement Operator Shaft Assembly
U211W	Escapement Roller Arm Assembly
U212	Target Escapement Cam
U213	Indexing Gear Sprocket
U214AW	Indexing Gear Drive Assembly
U102	Bushing for U214AW (not shown)
U216W	Indexing Drive Shaft Assembly
U217	Thrust Bearing for Indexing Drive & Gear Shafts (not shown)
U218	Main Shaft Sprocket
U219	Woodruff Key for Main Shaft Sprocket
U220W	Indexing Chain Assembly w/Connecting Link
U221	Chain Connecting Link
U222	Indexing Gear Housing
U223	Magazine Indexing Gear
U224AW	Indexing Gear Shaft Assembly
U225TR	Magazine Drive Piston

V1577A & B, V1582A & V1583A Western Autoloading Trap Parts








(For illustration refer to instruction manual)

CAT.NO.	NAME
U226	Indexing Gear
U227	Woodruff Key
* U228W	Worm Shaft
* U229W	Angle Change Gland
* U230W	Angle Change Worm Gear Assembly
* U231	Angle Changing Worm
* U232	Angle Change Worm Gear
* U233W	Worm Gear Shaft
* U234	Woodruff Key
* U235	Angle Change Gear
* U236W	Angle Change Idle Gear Assembly
* U238	Idle Gear Shaft
* U240W	Hub & Gear Assembly
X241	Oil Drain Plug (Magnetic)
+ U241	Angle Changing Control Gear
* U242W	Angle Change Control Link Assembly
* U248W	Angle Changing Disc Assembly
* U249	Spread Adjusting Screw
* U250BWA	Angle Changing Link Assembly
* U251	Angle Changing Link Pin
* U252W	Angle Link Pin Retainer Assembly
* U253	Angle Change Link Support Washer
U254A	Angle Changing Link Hub
* U255W	Trap Base Assembly
* U256	Trap Control Switch
* U257TR	Angle Change Switch
* U258W	Control Unit Assembly
U270TR	Angle Changing Link Spring
* U277W	Interruptor Kit
U278B	Interruptor Timing Motor & Cam (115V,60 HZ)
* U279	Interruptor Switch
* U280	Interruptor Mounting Plate
+ U286B	Interruptor Timing Cam
* U455	Safety Guard (Not Shown)

PARTS INDICATED (+) ARE NOT USED ON V1577A TRAPS. CONVERSION KIT U277W CAN BE ORDERED AT \$115.65 FOR THE PURPOSE OF INTERRUPTING HORIZONTAL MOTION OF V1577A TRAPS TO COMPLY WITH ATA RULE.


*NOT FOR USE ON V1582A & V1583A TRAPS.

       V1582A & V1583A Western Autoloading Trap Parts

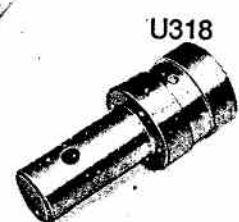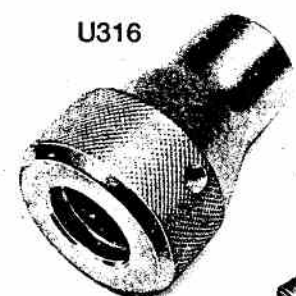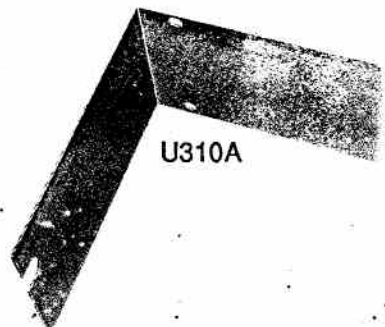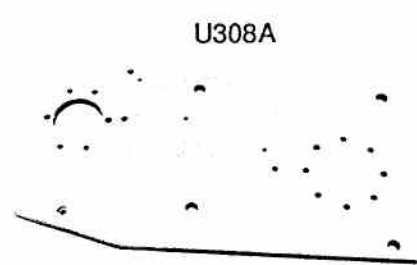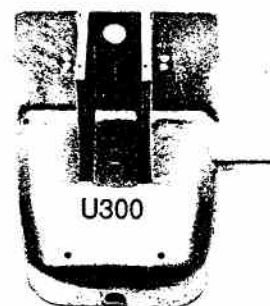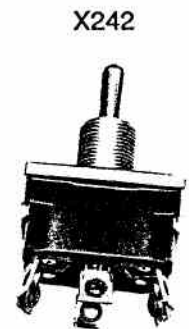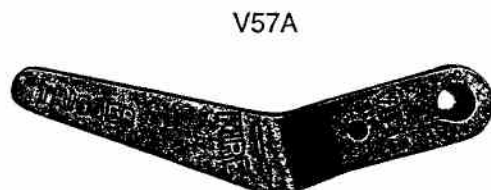


V1582A & V1583A Western Autoloading Trap Parts

 
U320W

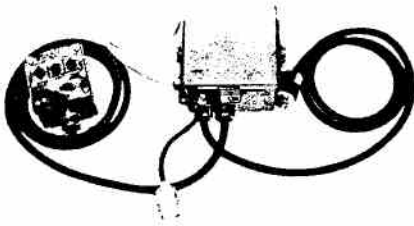

U321

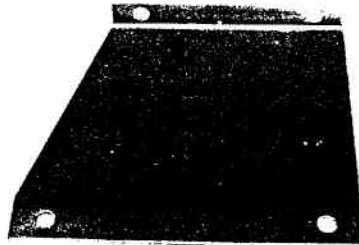 

U322W

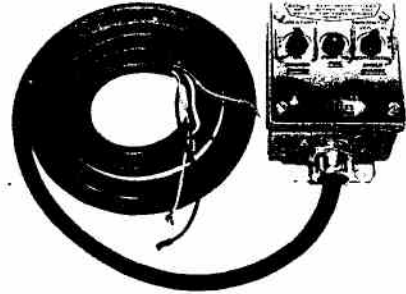 


U323



U324



 U325W

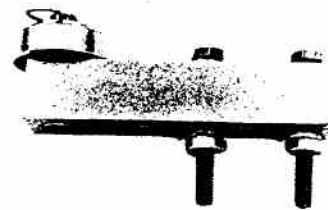


U332




U335W



 U337

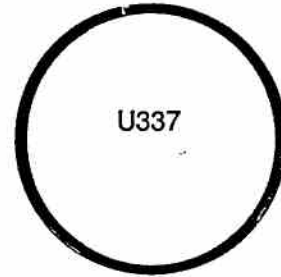

U338

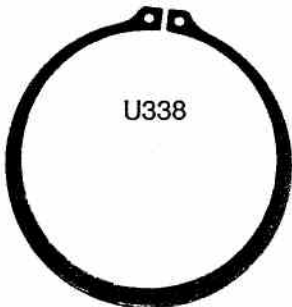 

U339



U340



 
U342BW




U345W




U346

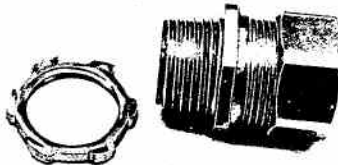

U351W

 

X203

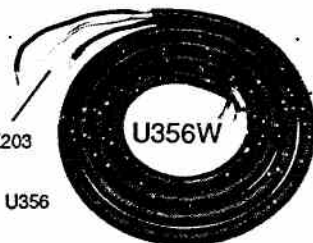 

U356









V1582A & V1583A

Western Autoloading Trap Parts

(See illustration on pages 14 & 15)












CAT.NO.	NAME
U27AW	Carrier Arm Assembly
U32BW	Carrier Rail Assembly (not shown)
V57A	Trigger
V111A	Cocking Ring Gear & Ratchet
U204AW	Target Feed Shelf Assembly
X242	Master Switch
X248	Power Cord Connector Cap (115V) (not shown)
U300	Mainspring Housing
U301W	Base Swivel Assembly
U302W	Elevation Rod End Assembly
U305	Angle Change Disc
U305W	Horizontal Angle Change Disc Assembly
U306	Swivel Base Bearing
U307W	Horizontal Drive Bearing Housing Assembly
U308A	Trap Base
U309	Bearing Support
U310A	Solenoid Cover
*** U314	Horizontal Windage Screw (not shown)
U316	Windage Housing
U318	Vertical Windage Pivot
U320W	Master Electrical Box (not shown)
U321	Electrical Bracket Box
U322W	Control Box Assembly
U323	Elevation Screw
U324	Spring Plunger
U325W	Leveler Support
U329A	Leveler Pin (not shown)
U330A	Release Transformer (115V) (not shown)
U331	Release Relay (not shown)
U332	Angle Change Motor (115V)
U334	Fire Switch Boot (not shown)
U335W	Fire Switch Assembly
U336	Angle Switch (not shown)
U337	Swivel Base Locking Ring
U338	Main Bearing Locking Ring
U339	Drive Pin Locking Ring
U340	Windage Housing Locking Ring
U341	Switch Plate (less guards) (not shown)
U342BW	Spread Adjusting Screw Assembly
U345W	Control Cable Assembly
U346	Connector
U351W	Switch Wire Assembly
U356W	Power Cord Assembly (without X248)

        V1582A & V1583A Western Autoloading Trap Parts

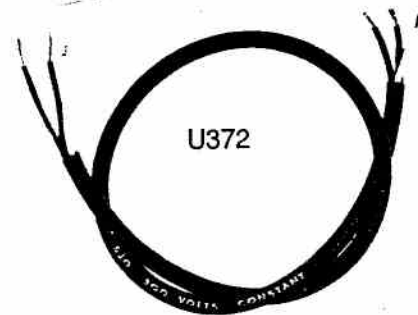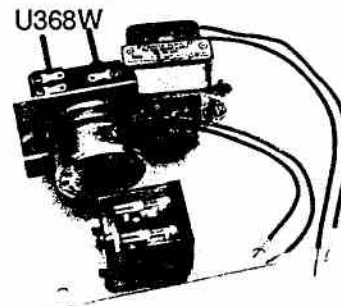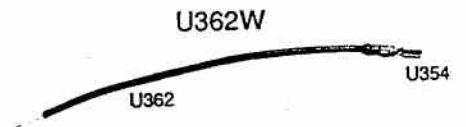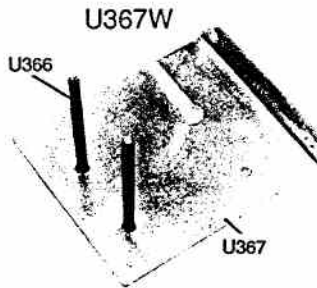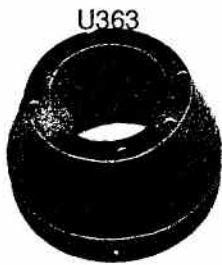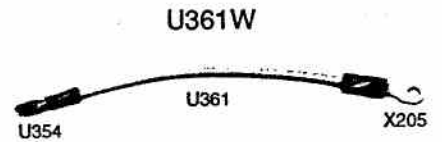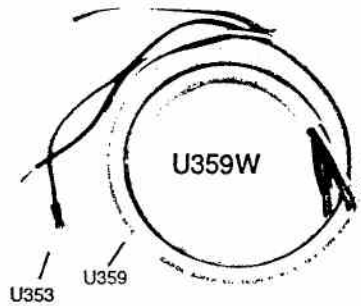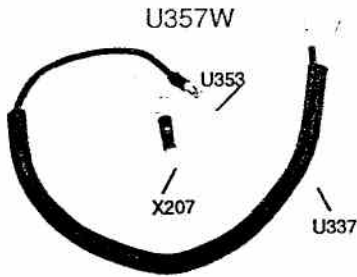

CAT.NO.	NAME
U357W	Release Input Cord Assembly (less connectors)
U358	Release Connector (not shown)
U359W	Supply Cable Assembly
U361W	Relay Wire Assembly
U362W	Relay Wire Assembly
U363	Magazine Escapement Cushion
U364	Target Stop Plunger (not shown)
U367W	Interruptor Plate Assembly
U368W	Master Electrical Box Panel
U370	Angle Changing Lock Washer
U371	Cable Clamp
U372	Solenoid & Elevation Motor Cable

           V1582A & V1583A Western Autoloading Trap Parts

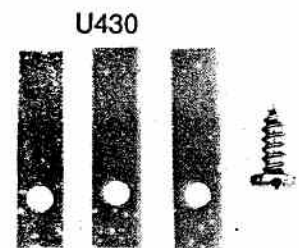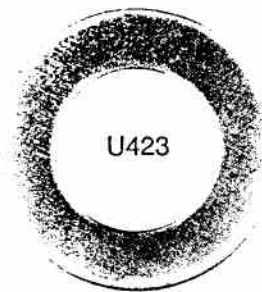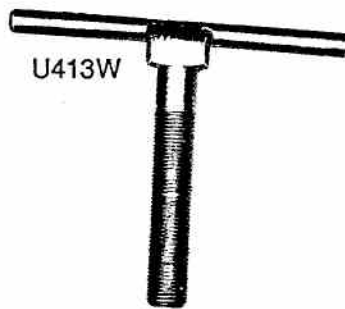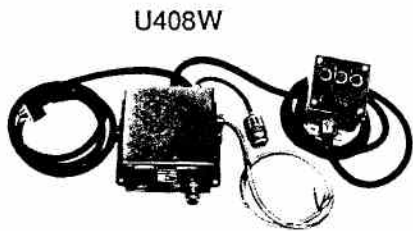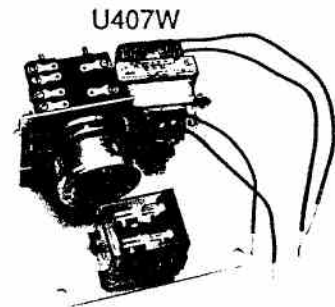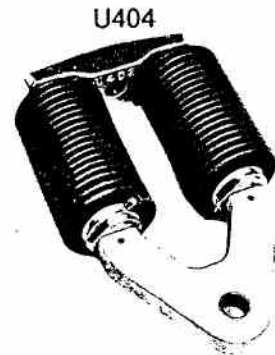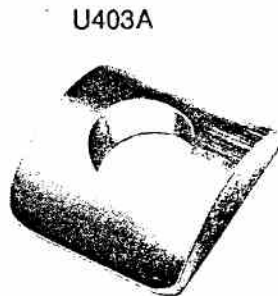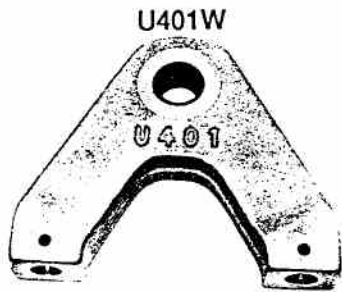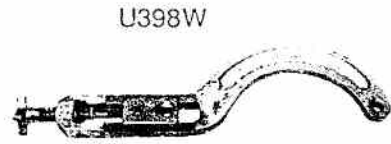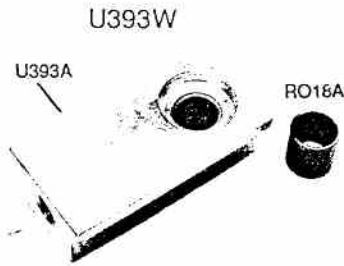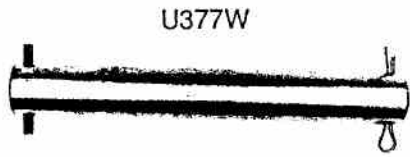

V1582A & V1583A Western Autoloading Trap Parts


CAT.NO.	NAME
U373	Carrier Plate (not shown)
U377W	Elevation Pivot Assembly
** U389	Horizontal Windage Screw (not shown)
U390	Hitch Pin for X39AW (not shown)
** U393W	Horizontal Windage Block
U397	Switch Plate Finger Guard (not shown)
** U398W	Horizontal Drive Link Assembly
X400	Trap Release (not shown)
U400	Conversion Kit (not shown)
U401W	Crank End Frame Assembly
* U403A	Dual Main Spring Swivel
* U404	Dual Mainspring Assembly Complete
* XU44W	Single Spring for U404
* U406W	Elevation Drive Disc
U407W	Master Panel Assembly
U408W	Master Box Assembly
* U411	Elevation Interrupting Cam (not shown)
V412	Release Boot (not shown)
* U413W	Dual Mainspring Adjusting Screw Assembly
U423	Washer
U424BW	Horizontal Spread Adj Screw Assby
** U425A	Rebound Spring Retaining Pin (not shown)
** U426	Rebound Spring Washer (not shown)
U427	Rebound Spring (not shown)
U428	Target Buffer
U429	Target Buffer Pad
U430	Finger Stop
U432	Replacement Gear Case for U332 (not shown)
U450	Safety Guard (not shown)

- * NOT FOR USE ON V1582A.
- ** USED ON ALL V1583A TRAPS, ALSO V1582A'S BEGINNING WITH SERIAL NO. U2720.
- *** NOT FOR USE ON V1583A.

V1582A TRAP CAN BE FIELD-CONVERTED TO V1583A SPECIFICATIONS BY PURCHASING AND INSTALLING INTERNATIONAL CONVERSION KIT U400. PRICE FOR KIT IS \$586.40.

V1524A, B & C Western White Flyer Electric Trap Parts

 
X1BW

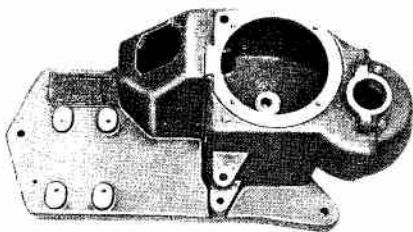

X3AW



 X4BW

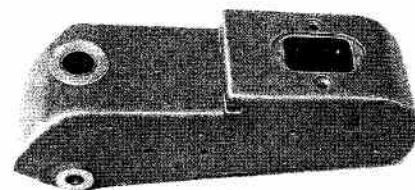

X5AW



 
X6



X11A




X12W



X13W



 X16BW

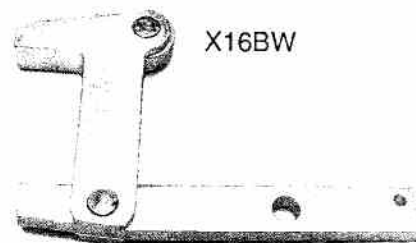

X21



X22



X23



X24



X25

 


X26




V1524A, B & C Western White Flyer Electric Trap Parts


X27W

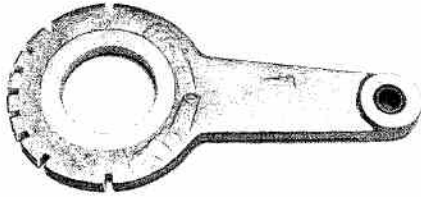

X28W

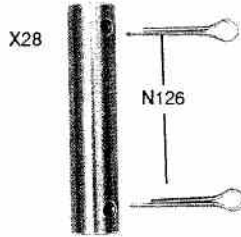 

X29W

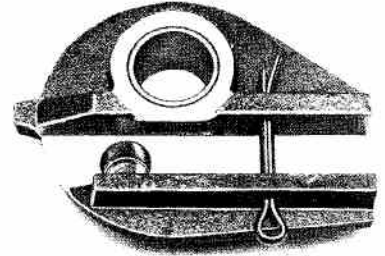 


X30




X31



 
X32

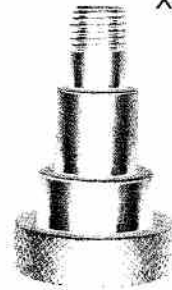


X33W

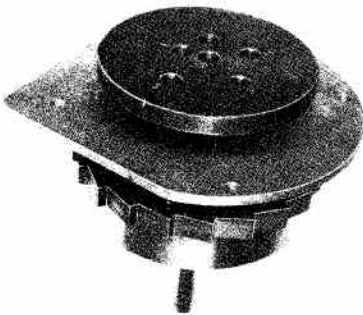 

X35W

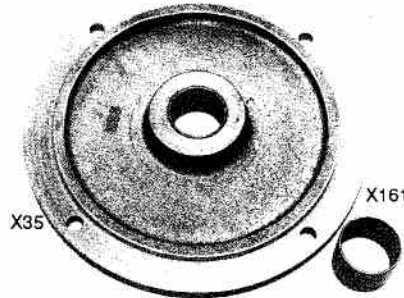 


X36W

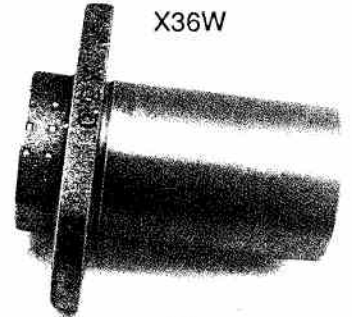 

V36AW



 
X39AW

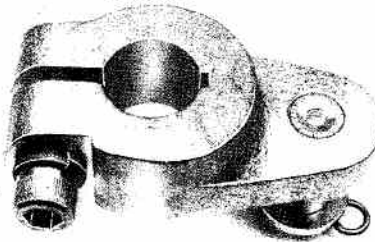


XU40W



 X42

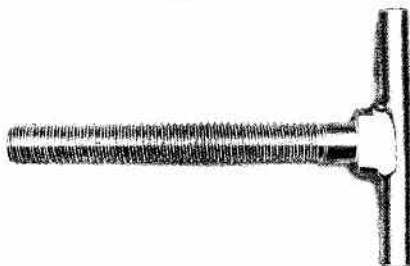

X43

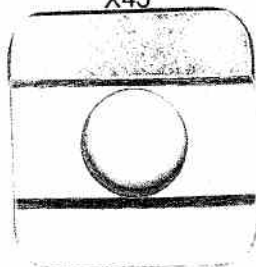 


X45




V1524A, B & C Western White Flyer Electric Trap Parts

 X50

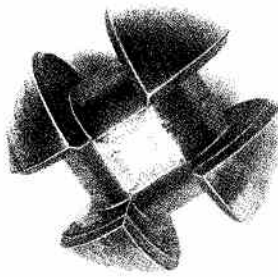


X53L

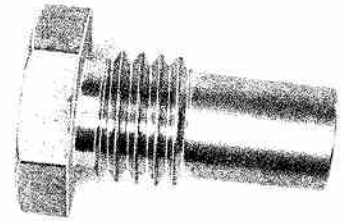 

X52



 
X53RW

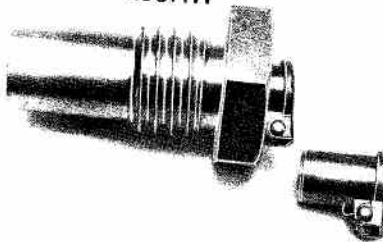

X54W



 X56W

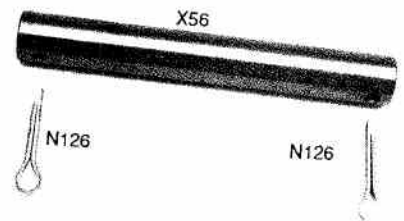


X57




X58



 
X59

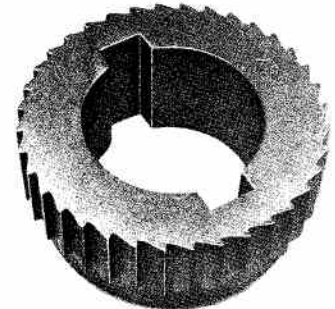

X64W

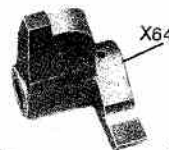 


X65

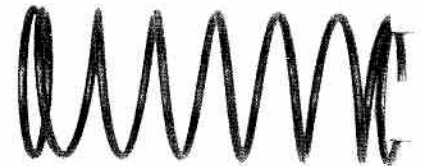 

N62W

 
N62

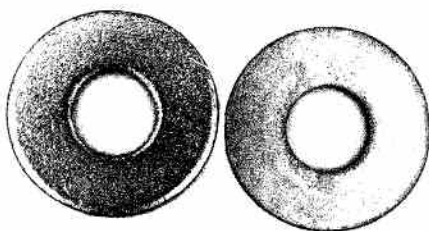


X64W



 X68DW

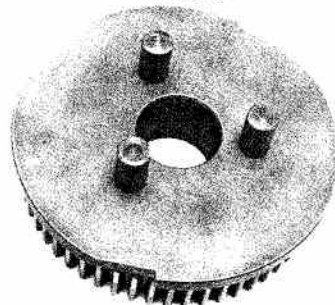

X73

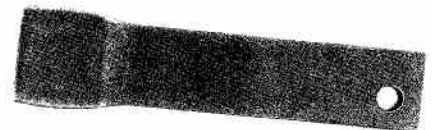 

V1524A, B & C

Western White Flyer Electric Trap Parts


(See illustration on pages 20, 21 & 22)

CAT. NO.	NAME
X1BW	Base Assembly
X3AW	Lower Frame Assembly
X4BW	Upper Frame Assembly
X5AW	Carrier Assembly
X6	Carrier Arm
X11A	Trigger
X12W	Trigger Pin
X13W	Pin
X16BW	Sear Arm Assembly
N19W	Carrier Rail (not shown)
X18AW	Sear Roller Assembly (not shown)
X21	Trigger Spring
X22	Elevation Adjusting Nut
X23	Elevation Adjusting Screw Lower (RH thread)
X24	Elevation Adjusting Screw Upper (LH thread)
X25	Elevation Screw Pin
X26	Elevation Holding Spring
X27W	Angle Changing Link Assembly
X28W	Angle Changing Link Pin Assembly
X29W	Windage Adjusting Hub Assembly
X30	Windage Adjustment Latch
X31	Windage Adjustment Latch Spring
X32	Target Spread Adjusting Screw
X33	Angle Change Disc Only (not shown)
X33W	Angle Change Disc Assembly
X35W	Gear Housing Cover Assembly
X36W	Worm Shaft Gland Assembly
V36AW	Trap Grounding Bolt (not shown)
X37	Washer (not shown)
X39AW	Mainspring Crank Assembly
XU44	Mainspring Coil (not shown)
+ XU40W	Mainspring Assembly
X42	Mainspring Adjusting Screw
X43	Mainspring Swivel
X45	Upper Mainshaft
X50	Universal Ball Joint
X52	Lower Main Shaft
X53L	Elevation Pivot Stud (LH)
X53RW	Elevation Pivot Stud (RH)
X54W	Cocking Ratchet Arm Assembly
X55	Ratchet Arm Key (not shown)
X56W	Ratchet Arm Pin Assembly
X57	Cocking Ratchet Pawl
N57W	Carrier Rail Screw Assby (set of 4) (not shown)
X58	Cocking Ratchet Spring
X59	Cocking Ratchet
N59W	Motor Mounting Screws (set of 4) (not shown)
N62W	Mainshaft Washers
X64W	Control Pawl Assembly
X65	Control Pawl Spring
X67A	Planet Studs (set of 3) (not shown)
X68DW	Driving Gear Disc Assembly
X73	Control Pawl Operating Finger


+ A USED XU40W MAINSPRING ASSEMBLY MAY BE RETURNED TO THE FACTORY FOR RECONDITIONING WITH NEW SPRING AND BUSHING. PRICE OF THE RECONDITIONED ASSEMBLY \$33.00, PLUS \$7.00 SERVICE CHARGE TO DEFRAY EXPENSE OF UNPACKING, TESTING AND REPACKING FOR SHIPMENT.

V1524A, B & C Western White Flyer Electric Trap Parts

 
X74

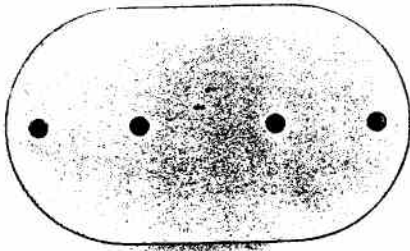

X75A

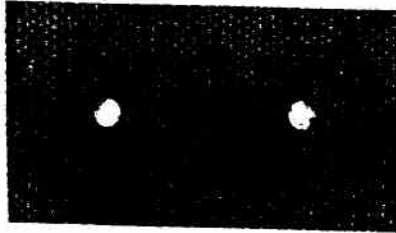 


X76W

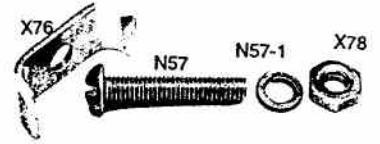 


X77W



 
X79W

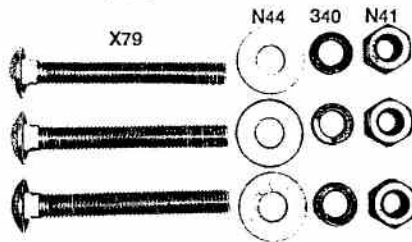


X82AW

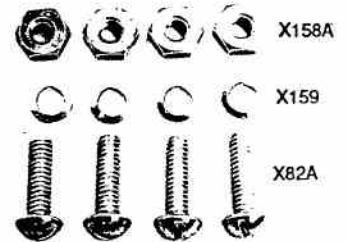 



X83W

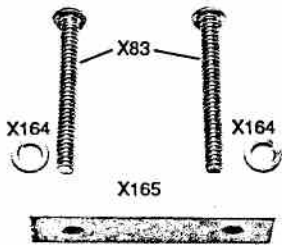 

X84

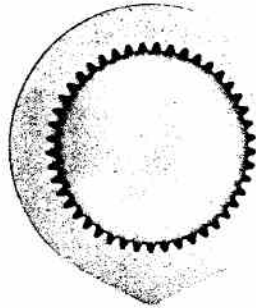 

X85W

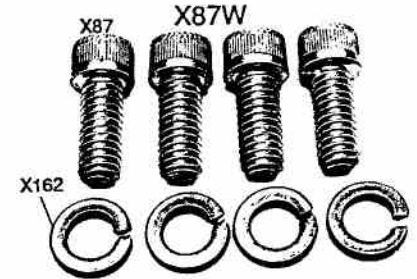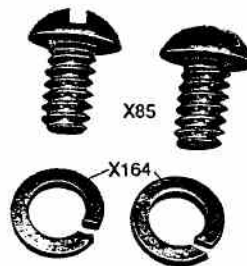  

X108AW



X88W



X94



X107



 
X110W



X110AW




X113

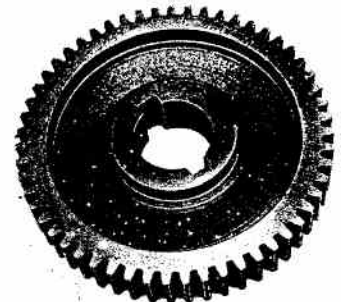


V1524A, B & C

 Western White Flyer Electric Trap Parts

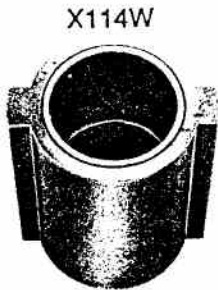

X114W

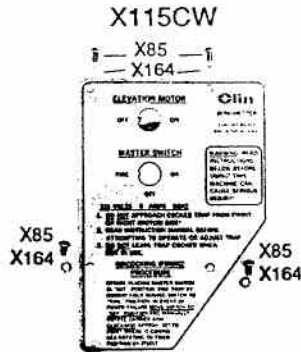 

X115CW



X117A

CAT.NO.	NAME
X74	Switch Mounting Plate for top opening in X4BW
X75A	Switch Mounting Insulator
X75	Control Switch Insulator for older traps not using X74 (not shown)
X76W	Cable Anchor Clip Assembly
X77W	Control Pawl Finger Retaining Screw Assby
X79W	Base Bolts (set of 3)
X82AW	Solenoid Mounting Screws (set of 4)
X83W	Control Switch Mounting Screws (set of 2 with nut plate)
X84	Oscillation Interruptor Gear
X85W	Switch Mounting Plate Screw (set of 2)
X86W	Assorted Cotter Pins (not shown)
X87W	Screws for Gear Housing Cover or Worm Shaft Gland (set of 4)
X88W	Clamp Screw with Lockwasher for X39AW or X54W
X89	Carrier Plate Screw (not shown)
X90	Roll Pin for X64W (not shown)
X91	Carrier Grommet (Synthetic Rubber) (not shown)
X92	Carrier Grommet Bushing (not shown)
X94	Key for Mainspring Crank
X95	Bushing for V3AW, X1BW, X36W (not shown)
X96	Bushing for X135W (not shown)
X97A	Bushing for X27W (not shown)
X98A	Bushing for U302W, U401, XU40W, X29W, U1W (not shown)
X99	Bushing for X110W (not shown)
X100	Bushing for V23W, X1BW, X108AW (not shown)
X101	Bushing for X3AW, XS3AW (not shown)
X102A	Bushing for X3AW, XS3AW, X114W, X4BW (not shown)
X103A	Bushing for X108AW (not shown)
X104	Bushing for X3AW, XS3AW (not shown)
X105	Bushing for X3AW, XS3AW (not shown)
X106A	Worm Shaft Oil Seal (not shown)
X107	Driving Worm
X108AW	Worm Gear Assembly
X110W	Planet Gear Assembly
X110AW	Planet Gear Assembly for factory interrupted traps
X113	Cocking Gear
X114W	Compound Bushing Assembly
X115CW	Switch Plate Indicator for X242
X117A	Power Cord Assembly

V1524A, B & C

Western White Flyer Electric Trap Parts

X119A



X120A



X123B



X122B



X251W

X244

X252W

 
X155B




X126C




X127A

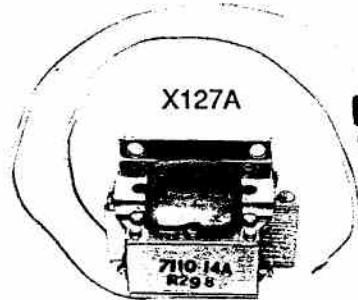


X128B

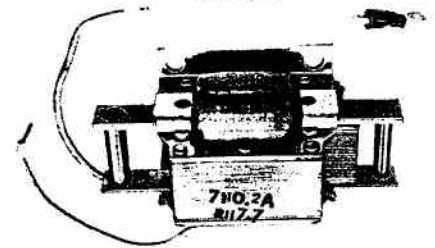 

XU129A

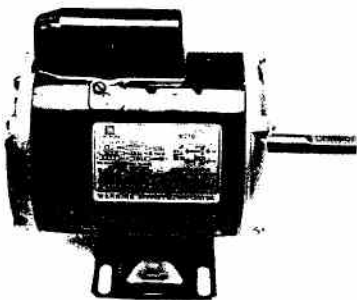 

X130B

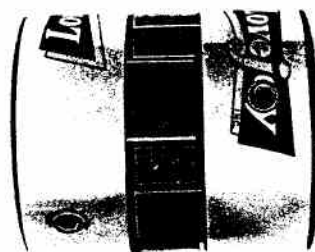 


X131



CAT.NO.	NAME
X119A	Power Receptacle
X120A	Release Receptacle Assembly
X122B	Motor Cable
X123B	Control Switch Cable
X125AX	Release Switch Only for X125A Release (not shown)
Z6A	Release Switch Only for X125B,C & D (not shown)
X126C	Control Switch
X127A	Release Solenoid Upper (115V)
X128B	Control Solenoid Lower (115V)
XU129A	Cocking Motor (115/230V, 60/50 HZ)
X130B	Motor Coupling
X131	Capacitor for Cocking Motor

 V1524A, B & C Western White Flyer Electric Trap Parts

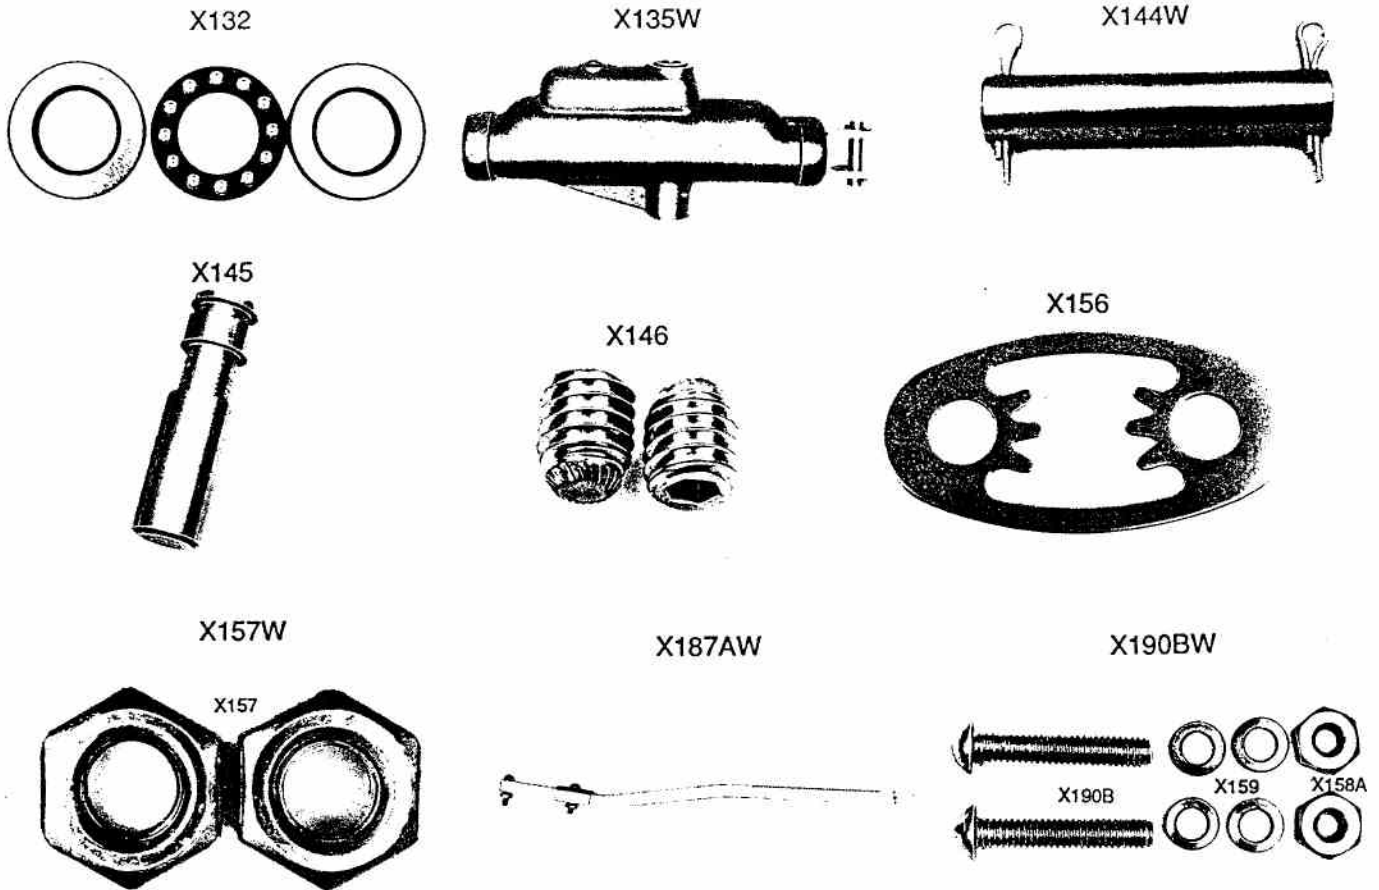

CAT.NO.	NAME
X132	Worm Thrust Bearing
X133	Oil Filler & Level Gage Plug (not shown)
X134W	Access Screw for Control Pawl Pin w/Washer (not shown)
++ X135W	Recoil Snubber Assembly
X144W	Recoil Snubber Clevis Pin Assembly
X145	Snubber Trunion Pin
X146W	Snubber Trunion Pin Set Screw (set of 2)
X156	Carrier Nut Lockwasher
X157W	Carrier Retaining Nut (set of 2)
X161	Bushing for X35W (not shown)
X180A	Target Stop Finger (not shown)
X181	Target Stop Finger Spring (not shown)
X182	Target Stop Carrier (not shown)
X187AW	Target Stop Guide Bar Assembly
X190BW	Guide Bar Mounting Screws (set of 2)

++A USED X135W RECOIL SNUBBER ASSEMBLY MAY BE RETURNED TO THE FACTORY FOR RECONDITIONING. PRICE \$53.00 PLUS \$9.75 SERVICE CHARGE FOR UNPACKING, INSPECTION AND REPACKING.

